


**Rebated profile**

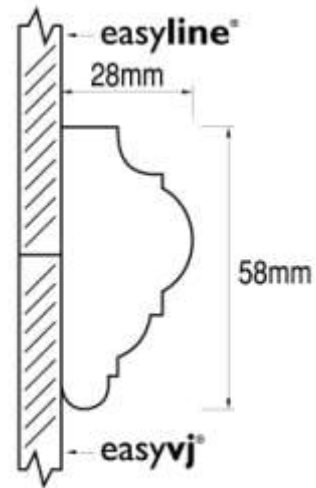

**Flat Profile**

- Manufactured from Clear Pine
- Pre-undercoated finish requires minimal preparation before final painting
- Two profiles available – Rebated and Flat

Type	Length	Weight
Rebated	3600mm	3.4 kg/length
Flat	3600mm	3.4 kg/length

- ❖ Straight and true moulding rail
- ❖ Rebated to suit 9mm Easycraft panels

**Suitable for:**

- Dado Rail to finish off the top edge of the panel
- Rebated Dado for a professional finish to the joint between the wall lining and the existing sheeting behind when doing renovations.
- Decorative trim over full height sheets

Note: easydado must not be directly subjected to water. If being installed into a wet area refer to Guidelines for Installing Easycraft Wall Linings in Bathrooms, Laundries and Kitchens on our website.

**Tools and Equipment Required:**

Tape Measure	Hand Saw or Power Saw
Hammer / Nail Gun	Pencil
Spirit Level	String Line
Caulking Cartridge Gun	P1 or P2 Dust Mask
Safety Glasses (complying with AS1337)	

- Easycraft Wall Linings can be easily cut with a Power Saw or Hand Saw. When using a Power Saw, cut the board with the face side down. When using a Hand Saw, cut the board with the face side up.

**Safety:**

- Easycraft products are manufactured from wood products. Accordingly, machine tools should be fitted with dust extractors and operators should wear a dust mask and eye protection.
- Further information is contained in the respective product Material safety Data Sheets (MSDS) available on our web site.

**Consumables:** The following is a list of products that are suggested will perform in typical product applications.

- **Nails:** must be long enough to penetrate into the sheeting behind.
  - Fixing wall linings: Hammer – use 2mm x 40mm anti-rust bullet head nail  
Nail Gun – use Paslode ND Brads 14ga x 45mm
  - If installing with power tools ensure the driving pressure is only sufficient to drive the head marginally below the surface. If the driving pressure is too high and the nail is driven in too far, splitting could occur and tool marks will show.
- **Glues:** a flexible construction adhesive should be used for fixing the Dado rail.
- **Miscellaneous:**
  - PVA adhesive for glueing corners and mitres.

**General:**

- Place a continuous bead of adhesive on the wall where the dado rail is to be fixed.
- Use only enough nails to hold the dado rail in place until the adhesive sets.
- Fix the Dado Rail to cover the top of the panels whilst ensuring it is level with a spirit level.
- If fixing the Dado Rail as a decorative trim it is best to use a string line to mark the position of the rail beforehand.

😊 Standard Drawing Details are provided on the Easycraft website.